

# Touchless disinfection spray dispenser; floor stand

Ordering code: DD-MOL-004



**assembled  
in Slovakia**


## General information

Non-contact disinfection dispenser installed in the floor stand. This solution is ideal e.g. for placement in the entrance areas of buildings and wherever wall mounting is not suitable. The stand has a solid construction, attractive appearance of stainless steel. The smooth surface is easy to clean.


## Technical specifications

automatic hands detection	infrared sensor (IR)
hand proximity detection range	2 to 10 cm $\pm$ 2 cm
dispensing type	spray
suitable disinfectant types	<ul style="list-style-type: none"> <li>• alcohol based solutions with alcohol content up to 75%</li> <li>• oxychlorine with active compound up to 0,03%</li> <li>• chlorine based disinfectants with Cl max. 50 ml/1 l</li> </ul>
total height	1 420 mm
hands disinfection area (from the floor)	1 060 mm $\pm$ 50 mm
dimensions of the base	265 x 265 mm
weight	10,0 kg
total height of shipping carton	1 430 mm
dimension of the base of shipping carton	270 x 270 mm
total weight	11,15 kg
power supply	batteries: 4 x 1,5V type AA; power adaptor 230 VAC / 6 VDC/1 A (not included)
capacity of disinfectant tank	600 ml
volume of single dose of the disinfectant	0,5 ml, resp. 1,0 ml
removable drip tray	yes
dispenser lifetime	minimum 100 000 cycles
batteries lifetime	approximately 15 000 doses (depending on battery type and brand)
stand-by current	less than 80 $\mu$ A

## Main dimensions

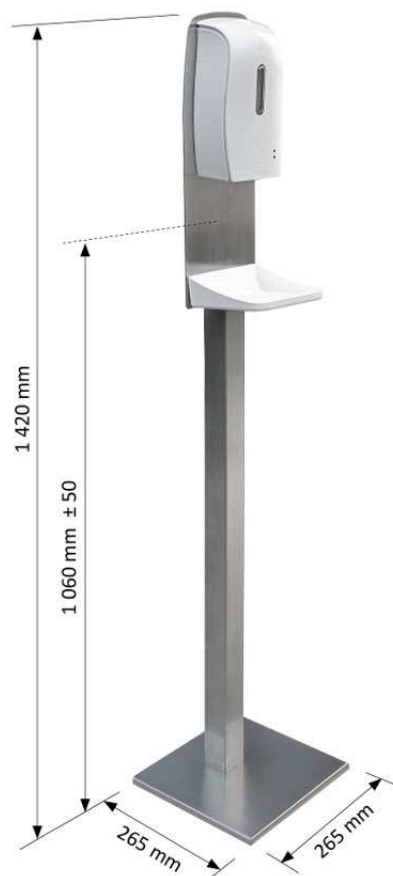

## Controls / main components

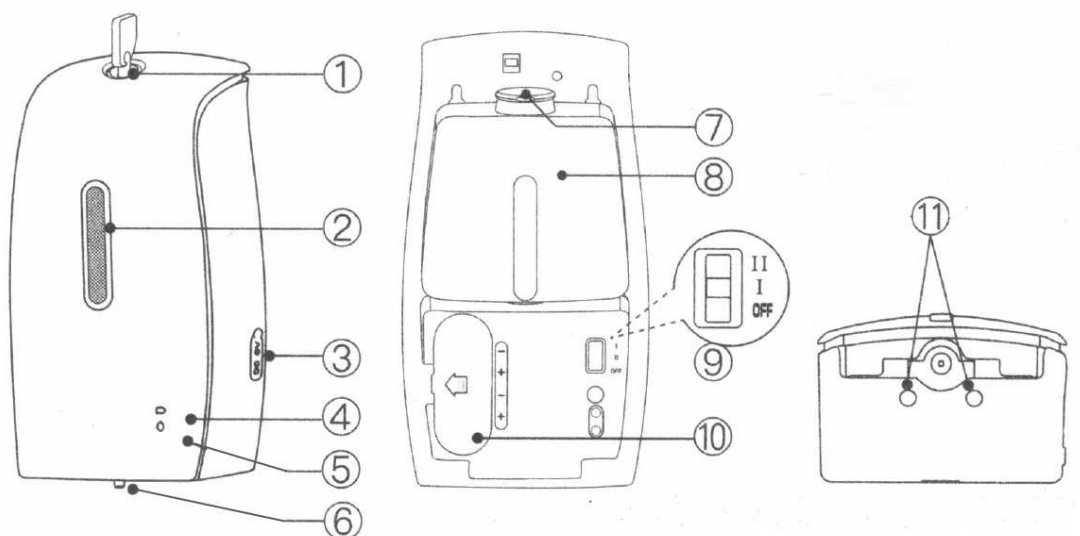

1	key of front cover
2	window for the check of the disinfectant level in the tank
3	power adaptor connector
4	red LED (battery status)
5	green LED (operation status)
6	dispenser nozzle (spray)
7	disinfectant reservoir filler neck
8	disinfectant reservoir
9	main switch / dose volume selector
10	batteries compartment (water splash resistant)
11	IR sensors

## Recommended accessories (disinfectant refills)

Order code	Description
DD-MOL-201	Alcohol based disinfectant with glycerine for direct use in the dispenser; 5 l container
DD-MOL-202	Alcohol based disinfectant with glycerine for direct use in the dispenser; 1 l bottle
DD-MOL-203	Disinfectant Steriland DERMA; with HClO 0,025 %; for direct use in the dispenser; 5 l container
DD-MOL-204	Disinfectant Steriland DERMA; with HClO 0,025 %; for direct use in the dispenser; 1 l bottle
DD-MOL-207	Alcohol based disinfectant with glycerine for direct use in the dispenser; 1 l bottle
DD-MOL-208	Alcohol based disinfectant with glycerine and aloe vera for direct use in the dispenser; 5 l container
DD-MOL-209	Alcohol based disinfectant for direct use in the dispenser; 1 l bottle
DD-MOL-303	Power adaptor 230 V AC / 6V (max. 2 000 mA)



**Before storing, transporting in a position other than upright and sending the dispenser for service, please empty the disinfectant tank to prevent it from leaking!**